

FOLD

FOLD

FOLD

**PURE**

Take a Moment to read me



support.pure-audio.com




EN For additional languages and help  
 DE Für weitere Sprachen und Hilfe  
 FR Pour d'autres langues et de l'aide  
 IT Per ulteriori lingue e assistenza  
 ES Para más idiomas  
 NL Voor meer talen en hulp  
 DA For yderligere sprog og hjælp  
 PL Dodatkowe języki i pomoc




### Getting started
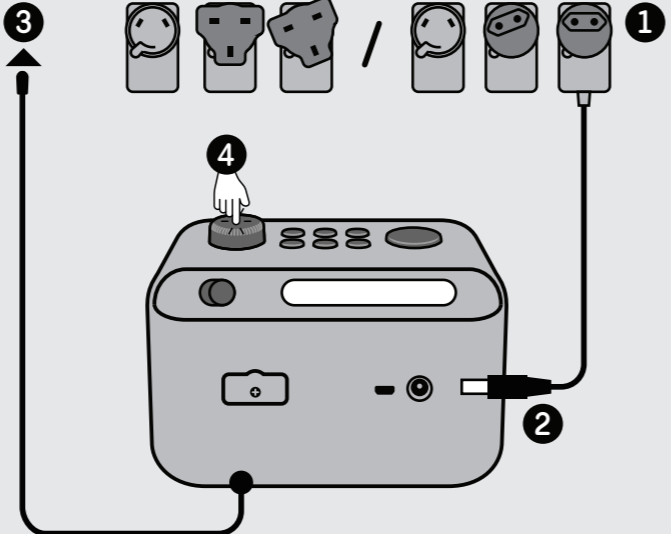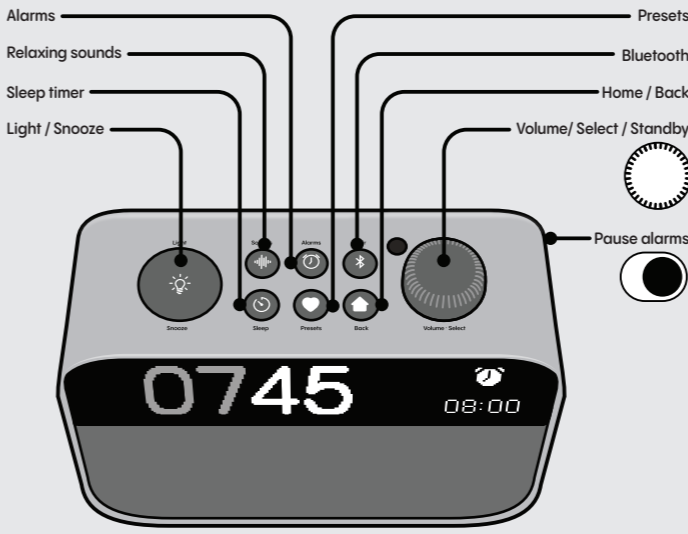
### On




### Standby



2 Seconds

### Standby clock faces



Tap to toggle through four standby screens.




FOLD

### DAB radio

#### Switch to DAB



#### Change station




- Station List
- Radio 1
- Talk

### FM radio

#### Switch to FM

#### Change FM station



- Station List
- 87.5
- 102.5

### Relaxing sounds

#### Play relaxing sounds






#### Sounds list





- Sounds List
- Birds
- Storm

### Presets ( DAB, FM & Sounds )



#### Save a station / sound as a preset (Maximum 10)

#### Remove a saved preset





#### Recall a preset list

FOLD

### DAB Scan




- Settings
- DAB Scan
- 12


Ensure the antenna is hanging vertically for the best possible DAB reception.

### DAB signal strength

Signal strength is visible in 24h clock mode or in 12h clock mode only when the signal is weak.

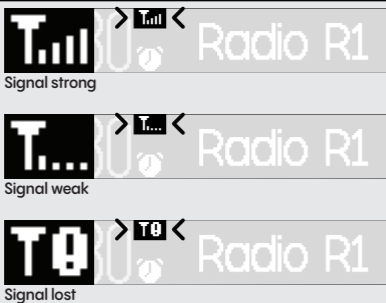


### Manual FM tune



- Manual Tune
- 12:30 96.6
- 12:30 96.65


### FM Scan



- Settings
- FM Scan
- 8



### FM signal strength

Signal strength is visible in 24h clock mode or in 12h clock mode only when the signal is weak.





### Bluetooth

#### Switch to Bluetooth

 
#### Pair new device

2 Seconds

When in pairing mode use the Bluetooth settings on your phone or tablet to pair to "Moment".

#### Paired successfully



**PURE** Joyful Listening.

support.pure-audio.com

**DO NOT INGEST THE BATTERY, CHEMICAL BURN HAZARD**

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Avoid subjecting the battery to extremely low air pressure.

**WARNING**

KEEP OUT OF REACH OF CHILDREN  
 Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

Pure International Ltd., Concept House, Kings Langley, Hertfordshire, WD4 8UD, United Kingdom  
 Pure Europe, Möslbichl 78, 6250 Kundl, Austria

FOLD

FOLD

 
FOLD

FOLD


FOLD

# Add an alarm


## 1 - Add new alarm




## 2 - Alarm time

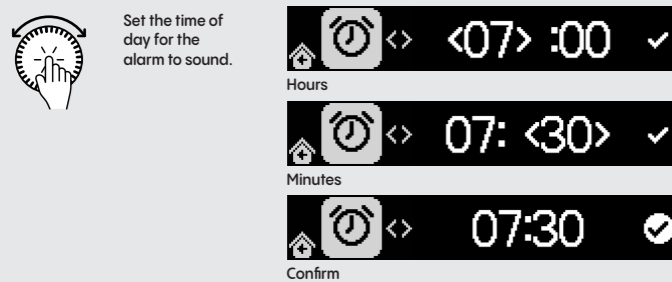


## 3 - Repeat

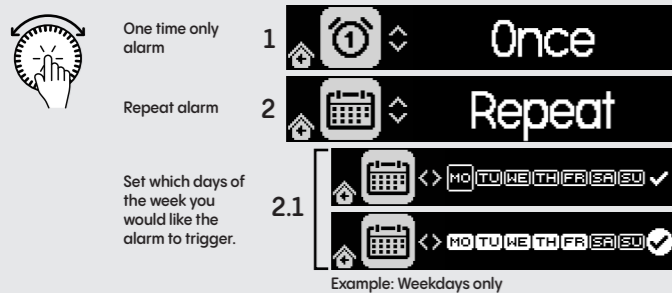

## 4 - Source

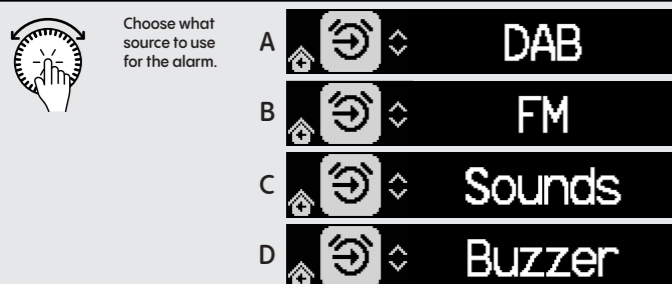

## 5 - Source content (DAB, FM & Sounds only)

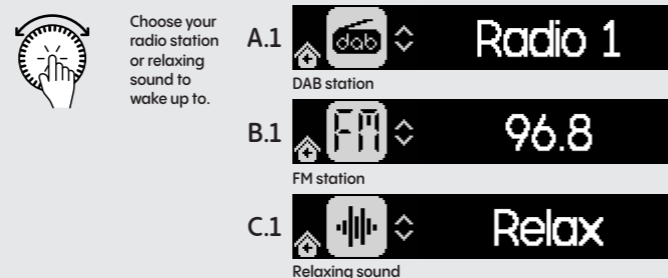


## 6 - Alarm volume



## 7 - Sound behaviour



## 8 - Light behaviour

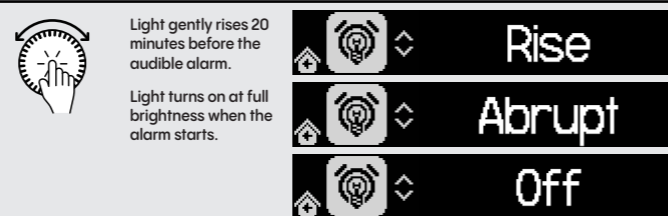


## 9 - Alarm saved



# Modify alarms

## Enable / Disable

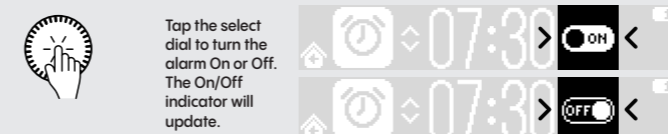


## Edit / Delete




# Pause alarms


## Enable and disable alarms

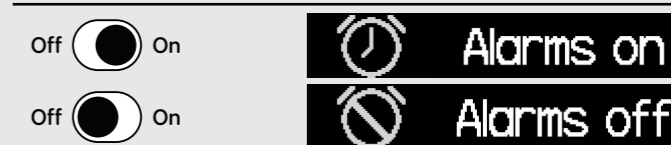

 One switch to enable all your currently active alarms or disable them in one convenient action.




## Alarm status icons

 

# Snooze or stop alarm

## Snooze alarm

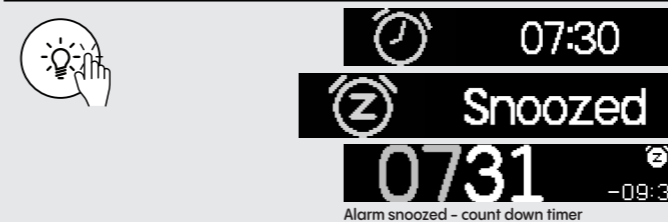

## Stop alarm



# Alarm battery backup


If mains power is lost only the next alarm will trigger with a loud backup alarm tone. If the backup alarm tone starts, slide the alarm switch to Off position to stop it. If you want to unplug Moment from mains power and do not want the backup alarm to trigger, slide the alarm switch to the Off position.

## Battery needs replacing



## Replacing battery

- Using a small screw driver remove the battery door compartment on the back of the product.
- Pull the battery door out.
- Take note of the battery orientation: Negative (-) side face up.
- Replace with a new coin cell: CR2032 - 3V - Lithium.
- Return the door and screw back in to place.

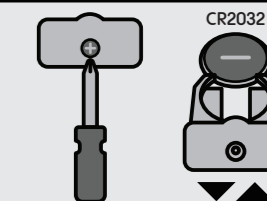


# Support light

## Turn off / on



## Adjust light brightness

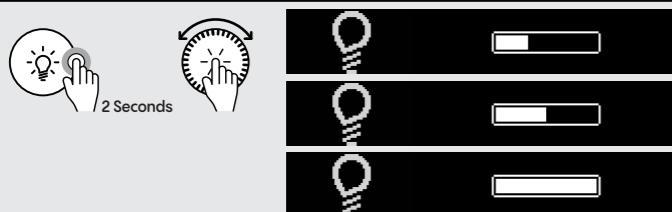

# Sleep timer

## Start the sleep timer



## Check or change the sleep timer




## Stop sleep timer




# Settings

## Brightness

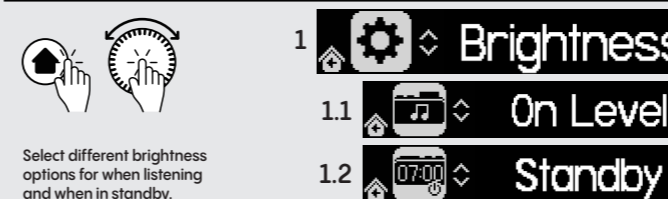

Select different brightness options for when listening and when in standby.


- Auto: High Automatic brightness levels for normal use.
- Auto: Low Automatic brightness levels for those with sensitive sight.
- Manual Set your own fixed brightness level.

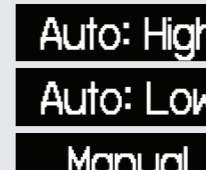

## Clock, Time & Date



## Language

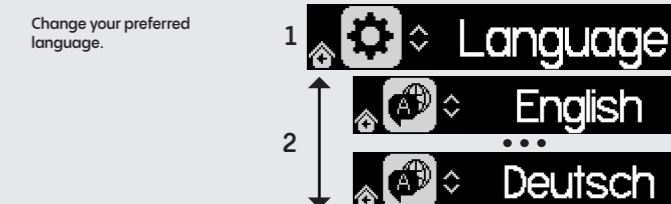

FOLD

FOLD

FOLD

FOLD